

L'OR Suprême

Placement and connections

This leaflet provides information about space- and connection requirements to ensure safe and successful installation, and operation of your coffee machine.


Please consult your local JDE Professional helpdesk for more information and explanation.

Please see the product brochure for more detailed information regarding range of available drinks, specifications, options and accessories.





L'OR Suprême




Placement and connections

Please observe the guidelines to maximize safety and performance

units of measurement = mm

Please consult your local JDE Professional helpdesk for more information and explanation.

Please see the product brochure for more detailed information regarding range of available drinks, specifications, options and accessories.

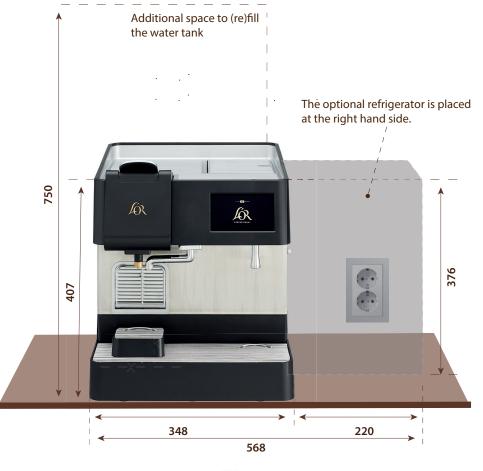



9 POWER SUPPLY

Power consumption (rated): 1300-1500 W (excl. 120 W for the optional fridge)
230VAC/50Hz, 16AWall outlet with earth connection (in compliance with your local regulations),
Distance from machine: <1 mtr.

△ WATER CONNECTION

(in compliance with your local regulations)
Only applicable in case of a fixed water connection:

Copper piping (or similar material approved for drinking water supply) Non-return valve (mandatory in many countries – check your local regulations) Water tap: 3/4"or 3/8"

Distance from machine : <1 m Water hose length : 1000 mm

Dynamic pressure: min. 1 bar at 10 L/min Static pressure: max. 8 bar non-shock

DIMENSIONS

H 407 mm x W 348 mm x D 496 mm

Add 100 mm space at the rear side for ventilation and/or connections
Add 350 mm above the machine to remove/insert the water tank
(total height =750 mm)

Empty weight: ca. 15 kg / operational weight: ca. 18 kg

OTHER

The wall socket and water stop valve should be located in the same room as the equipment and easily accessible.

Do not use power extension cords.

The equipment is only suitable for indoor use. (temperature: $5 \sim 25$ °C, humidity: <80% RH)

Place the equipment on a stable surface or furniture, capable of supporting its total weight.



L'OR Suprême




Placement and connections

Please observe the guidelines to maximize safety and performance

units of measurement = mm

Please consult your local JDE Professional helpdesk for more information and explanation.

Please see the product brochure for more detailed information regarding range of available drinks, specifications, options and accessories.

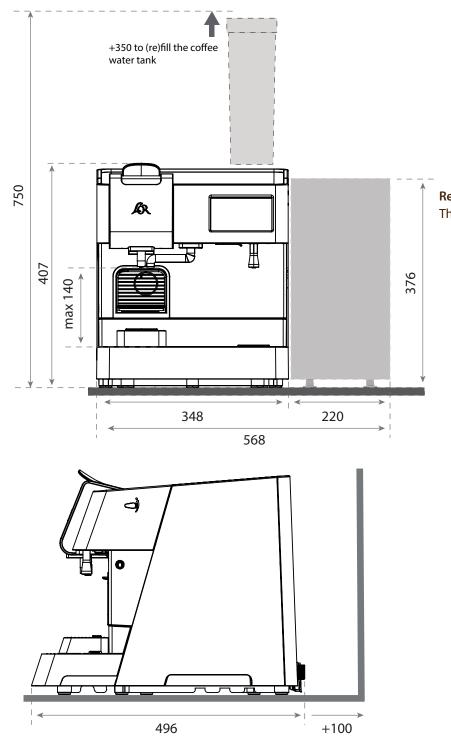

Refrigerator placement (option)

The refrigerator is placed at the right hand side.

